



Indoor WeathermanTM

Thermometer & Hygrometer • Model THI

- 1 Temperature Range:
14°F to 122°F
-10°C to 50°C
- 2 Hygrometer Range:
25% RH to 90% RH
- 3 Hang the meter on an inside wall or unfold the stand for tabletop use. Manufactured for indoor use only.
- 4 To check the maximum and minimum temperature or humidity, press the MAX-MIN button associated with each function. The display will show a maximum (Max) reading on the first press and a minimum (Min) reading on the second press. A third press will return the meter to the real-time display. There is a memory reset button for the thermometer function and one for the hygrometer function. The reset buttons work independently from each other. The microchip memory stores the highest and lowest reading since the reset button was last pushed. Pressing a reset button will delete the stored maximum and minimum readings associated with its function. Press a reset button to begin the time period you wish the meter to monitor.
- 5 The meter will display a temperature reading in Fahrenheit (°F) or Celsius (°C). Push the switch located on the back of the meter to either F or C.
- 6 Use one (1) 1.5 volt AA battery (included).
- 7 Note: Obvious inaccurate reading or no readings at all indicate a need for a new battery. If the display shows 15% Relative Humidity, the Relative Humidity is below 25%. Displays showing only horizontal lines indicate readings below or above the meters range.